


TECHNICAL DIAGRAM – UE Auto Tank Filler 1 Out

Example of installation

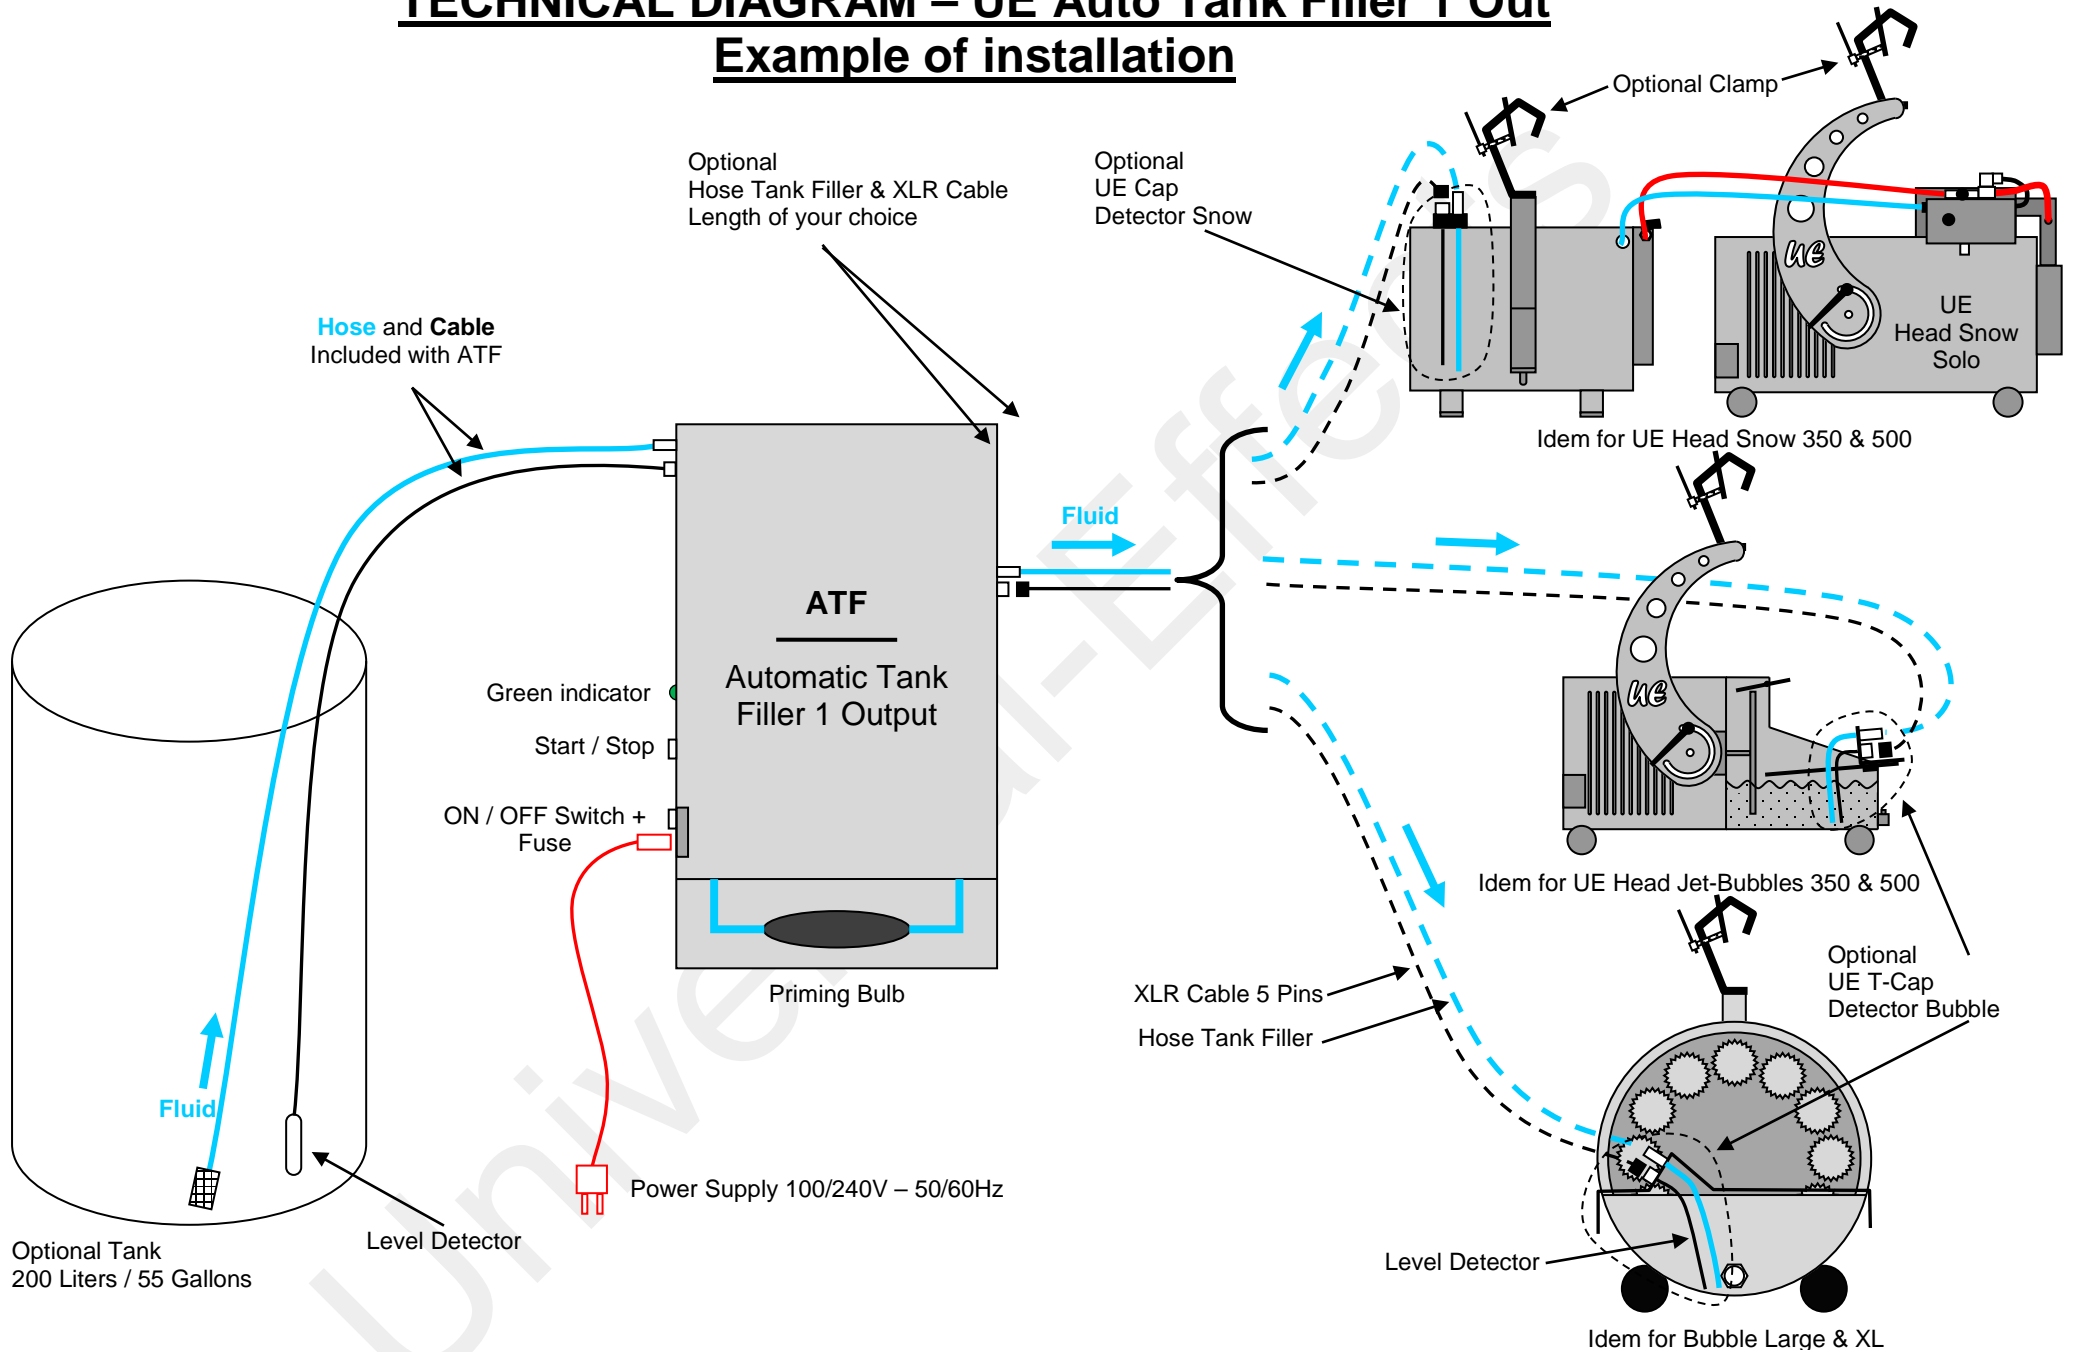

Snow & Bubble Machine must be connected to the power supply and must be controlled separately.
 Copyright Premium Factory – Non contractual diagram. Can be modified without notice – 19.01.01

